


MyToys
my toy, my joy!

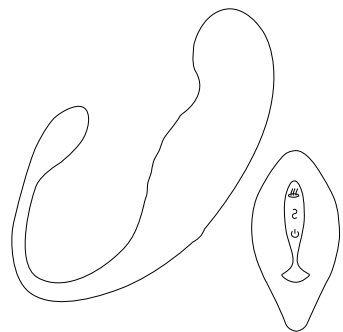

MyFinger User Manual
爱潮扣动挑逗跳蛋说明书

Features:

- Stimulates your G spot with finger-like motions
- Remote control
- Rechargeable
- Two motors for stimulating the clitoris and G spot
- 10 finger-like motions and 10 vibration modes
- Waterproof (except the remote control)
- Body-safe silicone and ABS material with smooth surface

Operating

1. Charging

Please fully charge for around 50 minutes before first use

LED flashes blue: charging

LED lights blue: fully charged

2. Getting started

- ⏻:
- Power on /off
 - Activate the vibration function of the tail part
 - Toggle between 10 different vibration frequencies

⌂:


- Change the finger-like motion frequencies
- Press and hold the button to deactivate the finger-like motion

🔊:

- Climax mode (boost MyFinger into the most powerful mode)

⏻:

- Power on/off
- Change the modes

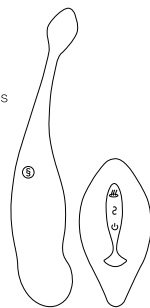

3.How to change the battery of the remote control



Turn anti-clockwise to open the battery cover



Take out the battery and insert the new battery (Type: CR2032)



Turn clockwise to close the battery cover according to the above graphic

4.Use



- Shortly click the ① button to turn on MyFinger into stand-by mode and the button lights up blue.
- Shortly click the ① button to cycle through the 10 finger-like motions.

- Shortly click the ② button on the remote controller to turn on MyFinger into stand-by mode and meanwhile all buttons light up in blue.

- Shortly click the ② button to cycle through the 10 vibration modes.

- Press and hold the ② button for 2 seconds to turn off the product.

- Shortly click the ③ button to cycle through the 10 finger-like motions.

- Shortly click the ④ button to boost MyFinger into the most powerful mode.



Specification

Material: Body-safe silicone and ABS with smooth surface

Size: 190x 33(Dia) mm, insertable size: 33mm

Modes: 10 finger-like motions, 10 vibration functions

Operation time: 40~60 mins

Charging time: 50 mins

Noise: 50 dB

Remote control distance: 10m

Battery of remote control: CR2032 button cell

中文

特点:

- 扣动: 给你感受如手指般挑逗的快感, 享受震动和扣动波涌的愉悦
- 双震动, 同时刺激G点阴蒂双重刺激体验
- 10种扣动频率, 10种震动模式
- 远程无线遥控
- 一键高潮 (直接到最强速度)
- 防水 (遥控器除外)
- 可充电设计
- 安全硅胶以及ABS 材质, 表面光滑

操作方法

1. 充电

首次使用前请充电50分钟左右

LED灯闪烁蓝色: 充电中

LED灯长亮蓝色: 充电完成

3.开始

⏻:

- 开机
- 激活小刷头震动模式
- 切换10种震动模式

⌂:


- 切换扣动频率
- 长按此按键关闭扣动功能

🔊:

- 一键高潮 (让产品达到最高强劲模式)

⏻:

- 关机
- 切换模式

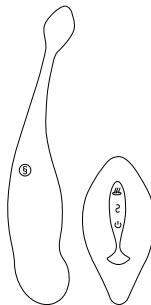

3.更换遥控器的电池



向左扭动电池盖



揭开电池盖, 取出电池, 换上新电池 (CR2032纽扣电池)



向右扭动锁紧电池盖

4.使用方法



- 短按“①”按键打开 (此时产品亮蓝光且处于待机状态)和长按产品2秒关闭
- 短按“②”按键切换10种扣动模式

- 短按遥控器上“②”按键开机, 遥控器上三个灯亮蓝色且处于待机状态, 长按“②”按键2秒关闭产品, 再次短按下“②”键, 切换小刷头的震动模式

- 短按遥控器上的“③”按键切换扣动功能的模式

- 短按遥控器上的“④”按键让产品到最强劲的模式



规格

材料: 安全硅胶以及ABS材质, 表面光滑

跳蛋尺寸: 190x33(直径) mm, 可插入尺寸: 33mm

频率: 10种扣动模式, 10种震动模式

使用时间: 40~60分钟

充电时间: 50分钟

噪音: 50分贝

远程遥控距离: 10米

遥控器电池: CR2032 纽扣电池