



VIBRATOR CARE INSTRUCTIONS

1. Take care when using the vibrator for the first time. Vibration can be intense.
2. Clean your vibrator after every use.
3. Take care when cleaning your vibrator. Remember it is an electrical item.
4. Keep your vibrator clean and dry. Store in a non-damp environment.
5. Always store your vibrator separately. Different materials have different chemical configurations and may react with each other.
6. Always allow your vibrator to cool down before storing in a safe place. Vibrators are electrical and motors grow warm with use.
7. Excessive usage of the vibrator will wear out the motor and may cause the motor to overheat. If you feel your vibrator is getting unduly hot, switch off and allow it to cool down, before continuing use.
8. Take care when using oils and lubricants so that they do not enter the battery compartment as they can react with the batteries.



CHARGING INSTRUCTIONS

This vibrator arrives partially charged, so it is recommended to charge it for at least 20 minutes before first use.

Connect the USB plug into the USB port of your computer or other output and the other end of the DC charger into toy's input.

Initial charge will take about 20 minutes, and subsequent charges will take about 1 hour to complete.

The blue LED light will flash on the toy while the device is charging, and remain solid when fully charged. There is no danger of battery damage by overcharging, but it's recommended not to overcharge for long periods of time. Charge lasts for about 70 minutes of play time on the lowest vibration level, and about 50 minutes of play time on the highest level.

This toy operates at a sound level of 55db and a power level of 3.7V with a lithium battery 240mAh.

USB RECHARGEABLE

INSTRUCTIONS FOR USE

Turn the toy on by pressing the Power Button at the base for at least 3 seconds. Use the same Power Button to cycle through 10 speeds and functions of vibration.

Turn the toy off by pressing the Power Button for at least 3 seconds.